


## BASEBALL NET ASSEMBLY INSTRUCTIONS

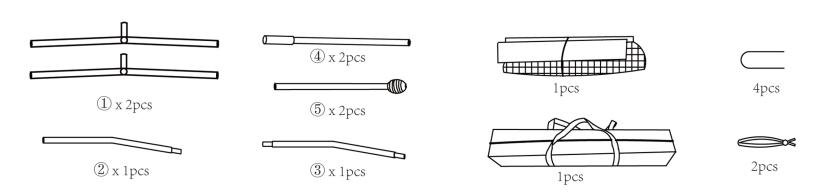

- 1. SET UPRIGHT THE TWO CORNER PIECES (1)
- 2. CONNECT (2) AND (3) TOGETHER TO MAKE ONE LONG BOTTOM ROD



- 3. CONNECT THE LONG BOTTOM ROD TO THE TWO CORNER PIECES (1)
- 4. CONNECT SIDE ROD BOTTOM PIECES TO CORNER PIECE (1) TO BEGIN TO MAKE THE SIDES

- 5. SPREAD THE NET OUT AND ATTACH THE VELCRO PANELS TO THE BOTTOM ROD
- 6. ATTACH THE NET VELCRO PANELS TO BOTTOM ROD






7. FEED RODS (4) INTO THE SIDE ENCLOSURE AND CONNECT TO UPRIGHT CORNER PIECES (1)






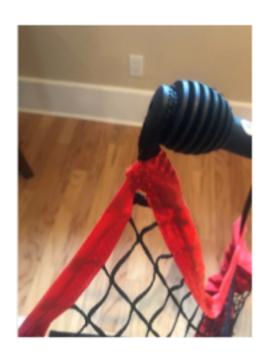

9. PULL THE NET ALL THE WAY UP TO THE TOP AND CONNECT THE LOOP TO THE BALL TIP. SECURE INTO PLACE. REPEAT FOR OPPOSITE SIDE

10. WHITE GRID IS OPTIONAL AND CAN BE CONNECTED IN ALL 4 CORNERS

11. ANCHORS CAN BE USED FOR GRASS OR DIRT FIELDS TO SECURE THE NET FOR WIND AND STABILITY.

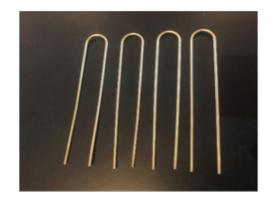



Seldomly parts may fall out of the box through shipping or warehouse handling. If you are missing any parts, or anything doesn't look right, please don't get angry and write bad things! We are just an email away and we will make it right ASAP.

Email us at rallyroargames@gmail.com